



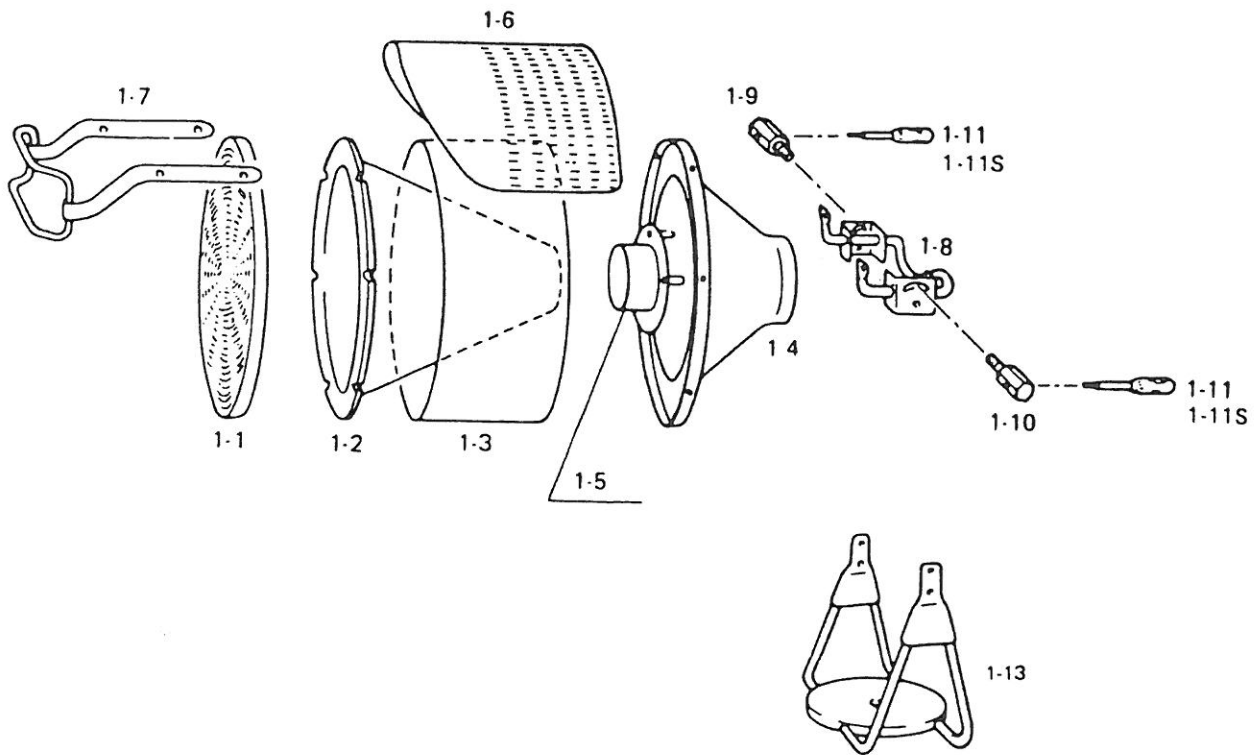

Nr.	Artikel Nr.	Bezeichnung	Part No.	Code No.	Description
1			1		Main unit
1-1	8801010	Verbrennungsplatte	1-1	8801010	Radiation disk
1-2	8801020	Isolation	1-2	8801020	Conical insulator
1-3	8801030	Gehäuse	1-3	8801030	Drum
1-4	8801040	Brennkammer	1-4	8801040	Conical housing
1-5	8801050	Brennerrohr	1-5	8801050	Burner fitting piece
1-6	8801060	Schutzschild	1-6	8801060	Visor
1-7	8801070	Schutzbügel	1-7	8801070	Guard rail
1-8	8801080	Brennerhalterung	1-8	8801080	Burner stay
1-9	8801090	Feststeller (R)	1-9	8801090	Clamp bolt (RH)
1-10	8801091	Feststeller (L)	1-10	8801091	Clamp bolt (LH)
1-11	8801110	Feststellgriff	1-11	8801110	Clamp lever
1-11S	8801111	Feststellgriff f. Schweiz	1-11S	8801111	Clamp lever (Swiss spec.)
1-13	8801130	Drehgestell	1-13	8801130	Burner leg

Part No.	Code No.	Désignation	Part No.	Code No.	Omschrijving
1			1	4116216	Verbr. kamer
1-1	8801010	Disque de combustion	1-1	4115473	Straalschijf
1-2	8801020	Isolation	1-2	4115481	Conische isolatie
1-3	8801030	Boîte	1-3	4115499	Trommel
1-4	8801040	Chambre de combustion	1-4	4115507	Conisch huis
1-5	8801050	Tuyau brûleur	1-5	4115515	Branderhuis
1-6	8801060	Défecteur de chaleur	1-6	4116224	Bovenplaat
1-7	8801070	Garde-branche	1-7	4116232	Beschermbeugel
1-8	8801080	Support du brûleur	1-8	4116240	Branderbeugel
1-9	8801090	Boulon pour serrefils	1-9	4115549	Vastzetbout (Rechts)
1-10	8801091	Boulon pour serrefils	1-10	4115556	Vastzetbout (Links)
1-11	8801110	Levier pour serrefils	1-11	4115564	Greep
1-11S	8801111	Levier pour serrefils (Suisse)			
1-13	8801130	Pieds de brûleur	1-13	4116257	Branderstandaard

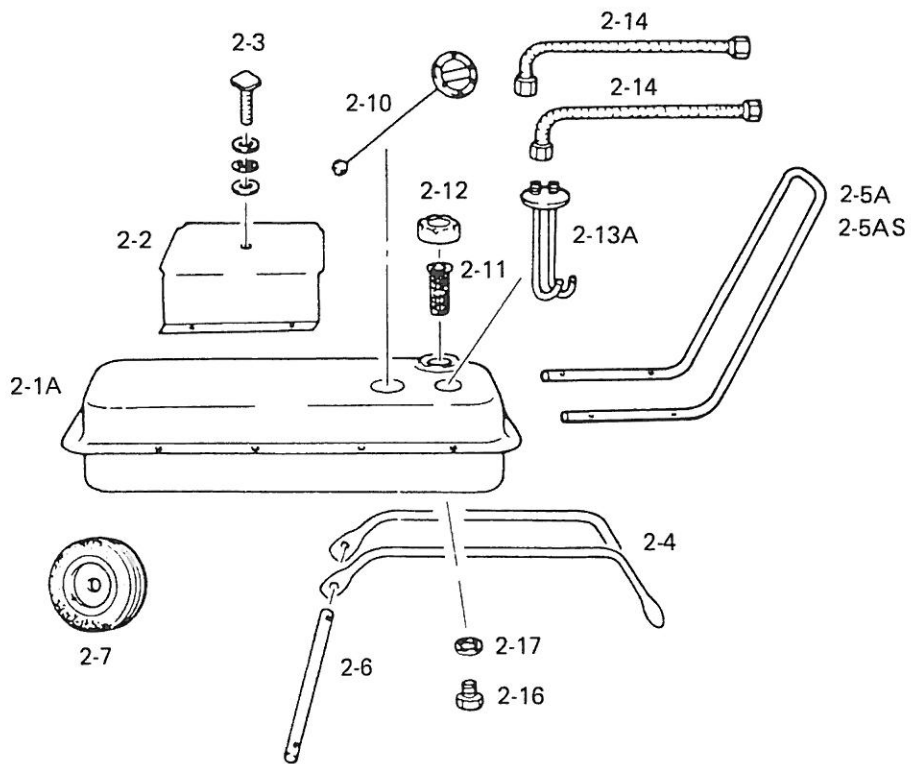

Nr.	Artikel Nr.	Bezeichnung	Part No.	Code No.	Description
2			2		Fuel tank
2-1A	8802011	Brennstofftank	2-1A	8802011	Fuel tank
2-2	8802020	Drehgestell/Unterteil	2-2	8802020	Swivel base
2-3	8802030	Befestigungsbolzen	2-3	8802030	Swivel bolt
2-4	8802040	Fahrgestell	2-4	8802040	Tank leg
2-5A	8802050	Griff	2-5A	8802050	Grip
2-5AS	8802051	Griff f. Schweiz	2-5AS	8802051	Grip (Swiss spec.)
2-6	8802060	Achse	2-6	8802060	Wheel shaft
2-7	8802070	Rad	2-7	8802070	Wheel
2-10	8802100	Tankanzeige	2-10	8802100	Fuel gauge
2-11	8802110	Brennstoffeinfüllfilter	2-11	8802110	Tank inlet filter
2-12	8802120	Tankdeckel	2-12	8802120	Filter cap
2-13A	8802131	Ölansaugrohr	2-13A	8802131	Suction pipe
2-14	8802140	Ansaugleitung	2-14	8802140	Fuel intake line
2-16	8802160	Stopfen	2-16	8802160	Drain bolt
2-17	8802170	Dichtung	2-17	8802170	Packing

Part No.	Code No.	Désignation	Part No.	Code No.	Omschrijving
2			2	4116158	Brandstoftank kpl.
2-1A	8802011	Réservoir de fuel	2-1A	4115382	Brandstoftank
2-2	8802020	Base du dessous de pivot	2-2	4116166	Montageplaat
2-3	8802030	Boulon de pivot	2-3	4116174	Zwenkbout
2-4	8802040	Pieds de réservoir	2-4	4116182	Wielbeugel
2-5A	8802050	Guidon	2-5A	4116190	Duwbeugel
2-5AS	8802051	Guidon (Suisse)			
2-6	8802060	Axe ,	2-6	4116208	Wielas
2-7	8802070	Roue	2-7	4115390	Wiel
2-10	8802100	Indicateur de fuel	2-10	4115424	Brandstofmeter
2-11	8802110	Filtre fuel tubulure de remplissage	2-11	4115432	Tankzeef
2-12	8802120	Bouchon de réservoir	2-12	4115440	Tankdop
2-13A	8802131	Tuyau d'aspiration fuel	2-13A	4115457	Aanzuigleiding
2-14	8802140	Tuyau d'aspiration	2-14	4115465	Flex-aanzuigleid
2-16	8802160	Bouton	2-16	4115408	Plug
2-17	8802170	Etanche	2-17	4115409	Afdichtring

Nr.	Artikel Nr.	Bezeichnung	Nr.	Artikel Nr.	Bezeichnung
3			3-48	8803510	Fotozelle
3-1	8803180	Düse	3-50	8803120	Fotozellenhalter
3-2/3	8803150	Brennstoffrohrstütze	3-51	8803330	Transformator
		Brennstoffrohr	3-52A	8803340	Zündkabel
3-4	8803210	Elektrode links	3-53	8803420	Zündkabelstecker
3-5	8803220	Elektrode rechts	3-54A	8803010	Brennerdeckel
3-6	8803160	Elektrodenstütze	3-55	8803650	Gehäusewinkel
3-7	8803190	Elektrodenplatte	3-56	8803520	Dichtung
3-8	8803080	Elektrodenabdeckung	3-57	8803130	Brennerflansch
3-9	8803310	Brennstofffilter kpl.	3-58	8803140	Brennerkonus
3-10	8803311	Filtereinsatz	3-59	8803200	Wirbelscheibe
3-11	8803580	Filterglas	3-65	8803440	Kontrolllampe "Störung"
3-12	8803590	Filtergehäuse	3-67	8803430	Kontrolllampe "Betrieb"
3-15	8803320	Nippel	3-69A	8803410	Schalter
3-16	8803300	Nippel	3-70	8803670	Kabel
3-17A	8803291	Brennstoffleitung	3-71	8803540	Zuleitung
3-18	8803280	Winkel	3-74	8803680	Brennerdichtung
3-19A	8803261	Pumpe	3-75	8800333	Düsenschlüssel
3-20	8803690	Ventil	3-78	8803705	Kondensator f. Schweiz
3-21	8803270	Nippel	3-79	8803710	Entlüftungsventil
3-22A	8803241	Brennstoffleitung	3-80	8803720	Brennstoff-Rücklaufleitung
3-23	8803250	Gummidichtung	3-81	8803730	Nippel
3-25A	8803020	Gehäuse	3-82	8803660	Gummidichtung
3-26	8803030	Griff	3-83	8803700	Reparaturset
3-26S	8803031	Griff f. Schweiz	3-84	8863700	Adapter
3-27	8803230	Platte	3-85	6904010	Ölvorwärmung
3-28A	8803060	Gehäusedichtung	3-87	8803372	ZNR (1 OK 471)
3-30	8803620	Gehäusewinkel	3-88	8803374	Diode
3-37A	8803370	Steuerung	3-89	8803585	O-Ring
3-38	8803380	Sicherungshalter	3-93	8803215	Elektrodennippel
3-39	8803400	Deckel	3-94	8803216	Mutter
3-41	8803390	Sicherung	3-99	8803591	Verschraubung
3-42C	8803470	Halter	3-103	8803500	Halter
3-42S	8803471	Halter f. Schweiz			
3-43	8803480	Halter			
3-44	8803630	Dichtungsring			
3-45	8803360	Platte			
3-46	8803640	Kabelklemmen			
3-47A	8803491	Lüftermotor kompl.			